

CARE INSTRUCTIONS

SEER S1711 BALLISTIC HELMET

Ballistic Helmet:

This helmet has been designed to withstand bullets, fragments and low velocity impacts. It is therefore important that you read the following instructions:

WARNING

Proper storage and/or use of the Helmet, Face Shield, Lazer-Shield and Tactical Duty Guard is important in order to maintain its protective capabilities. Any modifications/alterations, including through misuse, abuse, neglect, mishandling, breakage, damage, unauthorized repair or service, ordinary wear-and-tear, abnormal or abusive maintenance, accidents, natural forces, acts of God, or other causes may be detrimental to the helmet intended capability, and may void any warranties.

Proper use and care of the product includes, but is not limited to, avoidance of the following: Exposure to chemicals and/or solvents; Storage in high heat; Storage in direct sunlight for prolonged periods of time; and Storage in damp areas. Please note that in certain geographic areas, based on climatic condition (i.e. hot or humid), storing the helmet during duty in a non-temperature controlled area constitutes improper storage.

Receipt of Your Helmet:

Inspect for obvious physical damage & check that the straps are not twisted or incorrectly configured. All fastenings must be tight. If helmet has been damaged in transit report any damages and contact Super Seer Corporation.

Care of Your Helmet:

- This helmet should only be used as a ballistic helmet — other uses may reduce protection provided
- Do not use as a hammer or shovel or for carrying liquids
- Do not expose to excessive heat or flame
- Keep your helmet clean and dry.
- If helmet is damaged **DO NOT USE** and return for repair or replacement

Wear & Fitting:

HAT SIZE	INCHES	CENTIMETERS	HELMET SIZE
5 1/2 - 6 1/4	18" - 20"	46 - 50	SMALL
6 1/4 - 7	20" - 22"	50 - 56	MEDIUM
7 - 7 5/8	22" - 24"	56 - 61	LARGE
7 5/8 - 9	24" - 26"	61 - 66	X-LARGE


It is important that the helmet is properly adjusted to fit the wearer. Poor fitting helmets could reduce the protection level offered to the wearer.

- Check the label to ensure you have the correct size of helmet
- Should head underclothing be worn, adjust helmet accordingly
- Internal adjusters should be released. Position helmet squarely so wearer can just see front of helmet. Adjust chinstrap by evenly altering the Triglidge at back of neck and adjust Ladderlock buckle at the temples ensuring webbing lays against the skin

Once adjustments have been made, when donning and doffing helmet only use the press-stud fastener on the chinstrap.

Helmet Harness System:

Your helmet will be fitted with either a Mesh Suspension System or Helmet Pad System. Ensure your mesh suspension system is adjusted to fit your head. If you have a pad system, ensure that your helmet has the correct number of pads.

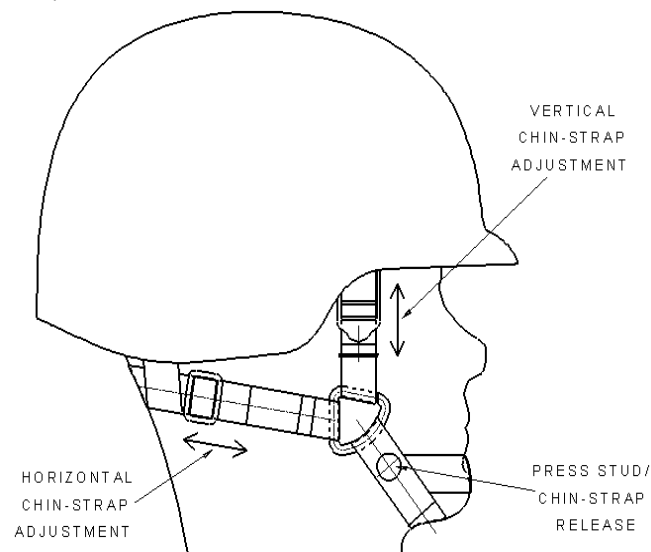

Standard Harness System

Helmet Protection Levels:


The helmet you have been supplied with has been designed to protect against ballistic impact from handguns and shotguns.

- Check inner helmet label to determine level of ballistic protection

Maintenance:

- Regularly inspect the helmet shell for signs of damage, this may affect serviceability
- Ensure all bolts are tight
- Wipe dirt and grime from the helmet using a cloth soaked in warm water with mild detergent. Wipe off soap suds with clean water
- Allow to air dry in warm atmosphere
- Do not attempt to apply solvents or aggressive cleaning agents to the helmet

Tactical Duty Guard Installation (see below):

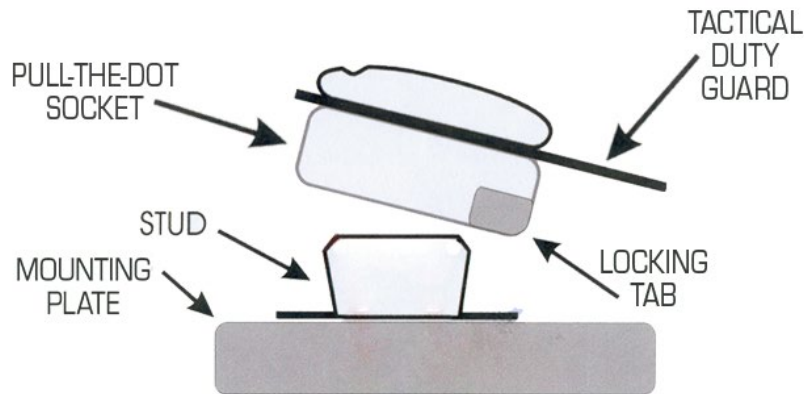


- Locate Locking Tab (see below)



- Position Locking Tab onto Stud base



- While keeping Locking Tab seated on the Stud base, roll the opposite side of Socket down until fully seated on Stud

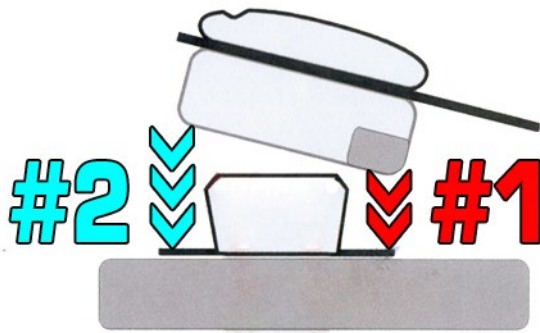

- Repeat the same process on the other Pull-The-Dot Snap on opposite side of Tactical Duty Guard




- Once both Pull-The-Dot sockets are set, slide the back of Tactical Duty Guard onto the Velcro in the back of the helmet.

Tactical Duty Guard Removal (see below):

- Locate "DOT" (see below)



- Pull the Tactical Duty Guard in the direction of the "DOT" (from the front toward the back of the helmet). Note: the Pull-The-Dot Socket will only release in one direction.

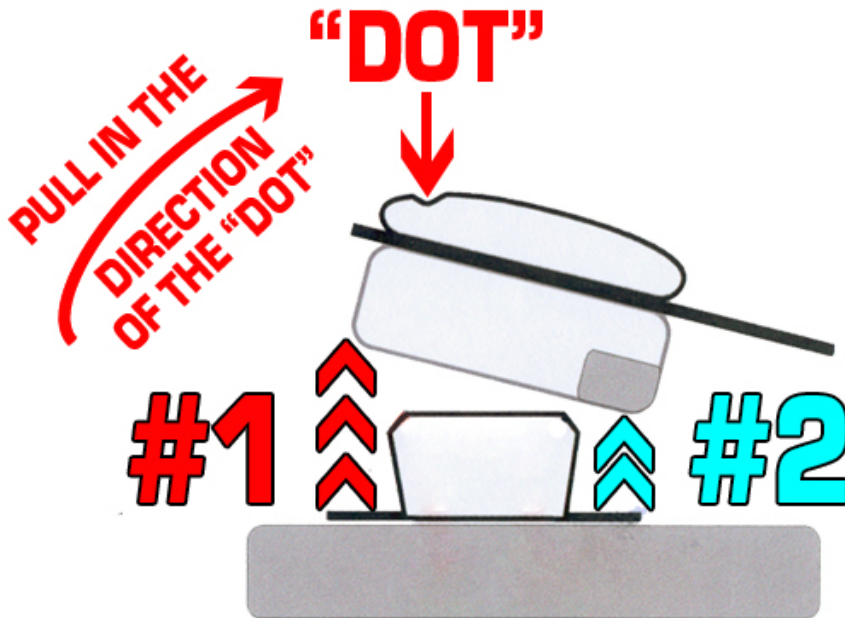

- Repeat the process on the opposite Pull-The-Dot socket.
- Once the snaps are unfastened, pull the back of the Tactical Duty Guard up and out to remove the Velcro attachment.

Lazer-Shield Use:

Your Seer S1711 Ballistic Helmet is equipped with the Lazer-Shield laser beam protection strip. When not in use, it is important to keep the face shield and Lazer-Shield stored in the included face shield cover. Always store the Lazer-Shield in temperature-controlled environments when not in use.

The Lazer-Shield is designed to sit right above the user's field of view. When under attack from a laser beam simply dip the head forward to engage the Lazer-Shield.



**When under attack from a laser beam,
the officer simply dips their head
forward to activate the Lazer-Shield**



WARNING

Do not use any cleaning agent on the Lazer-Shield. Doing so can damage the physical properties and degrade the effectiveness of the Lazer-Shield. Regularly inspect for obvious physical damage. Remove and replace the Lazer-Shield if any damage is present.

Replacement Parts:



S-7011-17 - Replacement Suspended Interior



S-1286 CPD - Tactical Duty Guard



S-1111 - Face Shield Cover



S-5011-LBP – Riot Faceshield with Lazer-Shield



S-LBPK-2CPD – Lazer-Shield strip for S-5024 and S-5011-LBP

For further information on sales / repairs, please contact Super Seer Corporation.



P.O. BOX 700 • EVERGREEN, COLORADO 80437-0700

PHONE (303) 674-6663 • FAX (303) 674-8540

Visit us at: <https://superseer.com>

E-Mail: sales@superseer.com

